



# CloudIO Calibration System Spectrometer


Code CA8002

## QUICK START GUIDE

### GL SPECTIS SETUP

To set the communication between GL SPECTIS and CloudIO, please perform the following steps:

1. Switch on both the devices
2. **On the GL SPECTIS:**
  - Go to “MORE”→“SETTINGS”→“Wi-Fi”, select your desired Wi-Fi network and connect to it
  - Press the right-side button two times in order to go back to the main menu
  - Enter “SETTINGS” and check the IP address assigned to the device.
3. **On the CloudIO:**
  - Go to “SETTINGS”→“Wi-Fi”, select the same Wi-Fi network chosen for GL SPECTIS and connect to it
  - Go to “SETTINGS”→“CALIBRATION” and fill in with the GL SPECTIS IP address.

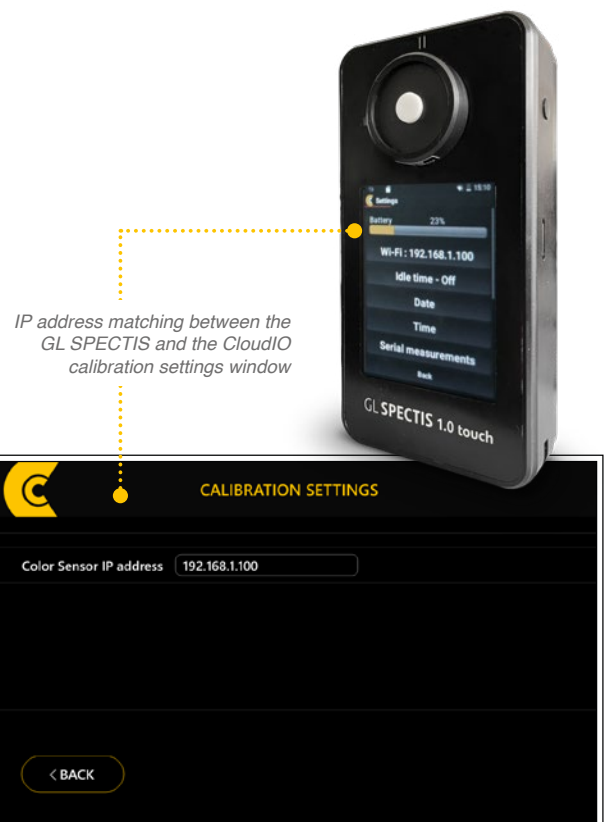

### GL SPECTIS DEFAULT PARAMETERS CONFIGURATION

- SETTINGS → “Keep Display On” = **Always**
- SETTINGS → “Idle time” = **Off**
- Wi-Fi → | → “Advanced WiFi Settings” \ “Keep WiFi On during sleep” = **Always**
- SETTINGS → “Mute” = **Disabled**

